




Armrest Height Adjustment

Height adjustment procedure
Pull the lever upwards and find the required position.

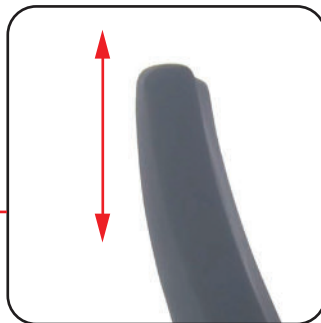

Back Height Adjustment

Back height adjustment procedure
Pull up the backrest upward to find the required position.



Seat Depth Adjustment

Seat depth adjustment procedure
Pull out the seat cover right lever and glide forwards or backwards.



Armrest Expand Adjustment

Expand adjustment procedure
Push the lever down and find the required position - pull up the lever up to lock.




Armrest Slide Adjustment

Armrest sliding procedure
Push the armrest button and pull forwards, backwards, in and out to find the required position.



Armrest Rotate Adjustment

Armrest sliding procedure
Push the armrest button and push round to find the required position.

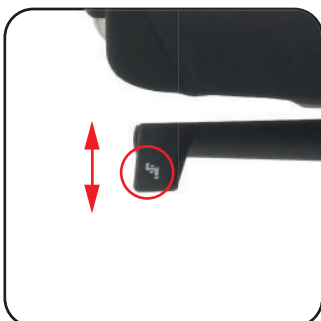

Chair Height Adjustment

Height adjustment procedure
Pull the right lever and find the required position



Back Tilting

Locking procedure
Find the required position and push the left lever downwards.

Unlocking procedure
Pull the left lever upwards and give pressure on the backrest.

